




Product Specification

TITLE: B0AOD TO FPC CONN.SMT D/R S/T TYPE SERIES


CONNECTOR USAGE

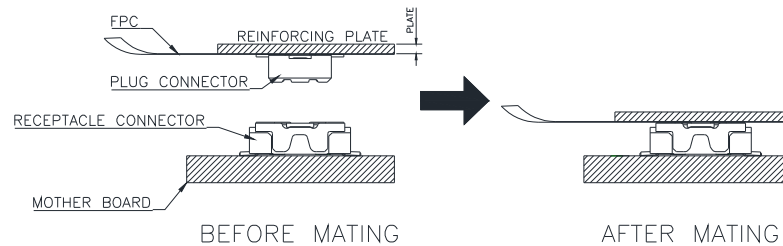

MATING PROCEDURE

1. Set the FPC block's position roughly.
2. Check the position of FPC block, moving it slightly.
3. Mate the connector until it becomes flat. (Don't push by too much force)
4. Check the mating state by pushing every corner of connector to prevent from Miss mating.

Check the mating condition

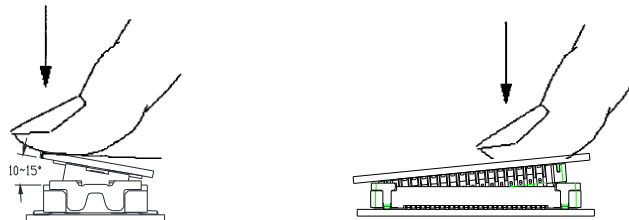

UNMATING PROCEDURE

